


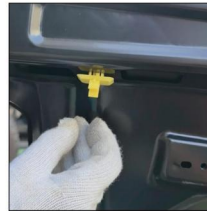

1. Remove the nozzle and pipe, then disassemble the original engine hood.
2. Install the latch lock bracket, side latch bracket, and hood support rod from the original hood onto the corresponding positions of the new hood.



2. Install the spring, windshield washer hose, latch and the support rod.



3. Assemble the hood latch, then install the spring and plastic buffer pad block.



4. Install the ventilation holes.



4. Attach the vents to both side of hood by included 3M tape.

