

07-18 JEEP WRANGLER JK Rear Inner Fenders



CAUTION BEFORE INSTALLING

Before installation - Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
E-mail: tech@calliert4x4.com

CALLIERT is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.



Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

- **Always wear eye protection when operating power tools.** •


Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

- Name of purchase location
- Bar Code on side of box

INSTALLATION MANUAL

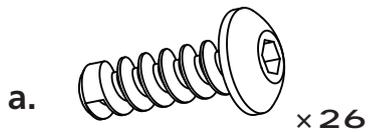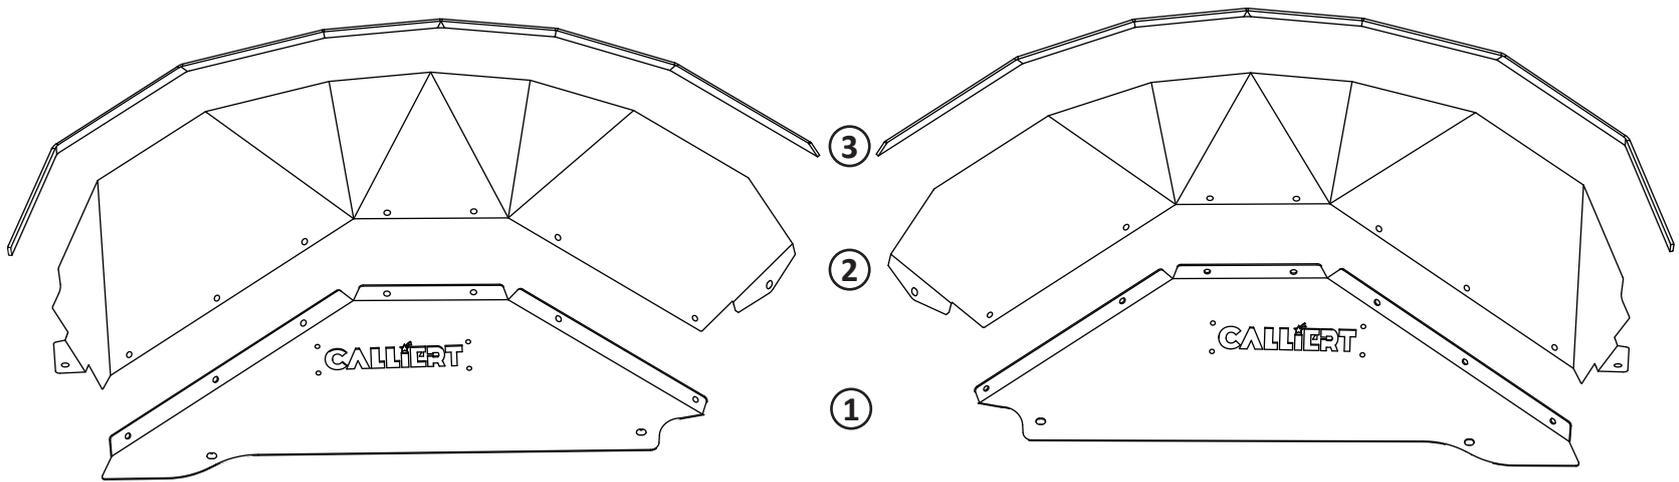


**M6*15
Button Head Hex Socket Bolt**

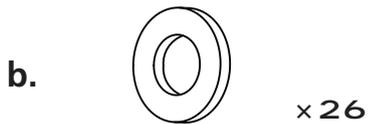

M6*14*1 Washer



M6 Hex Flange Nut

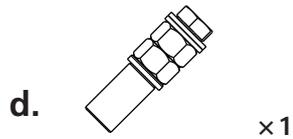


Rivet Nut Tool





Rivet Nut



U-nut Clip

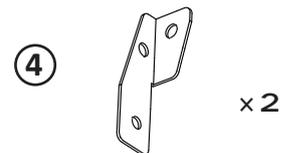

INSTALLATION MANUAL

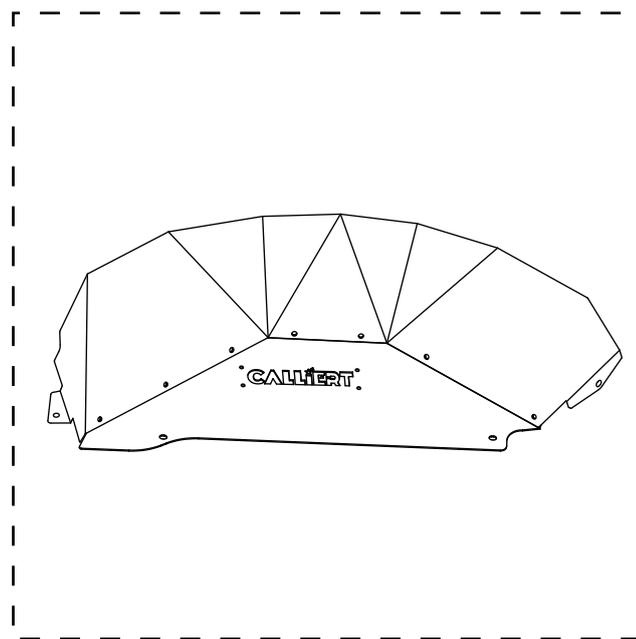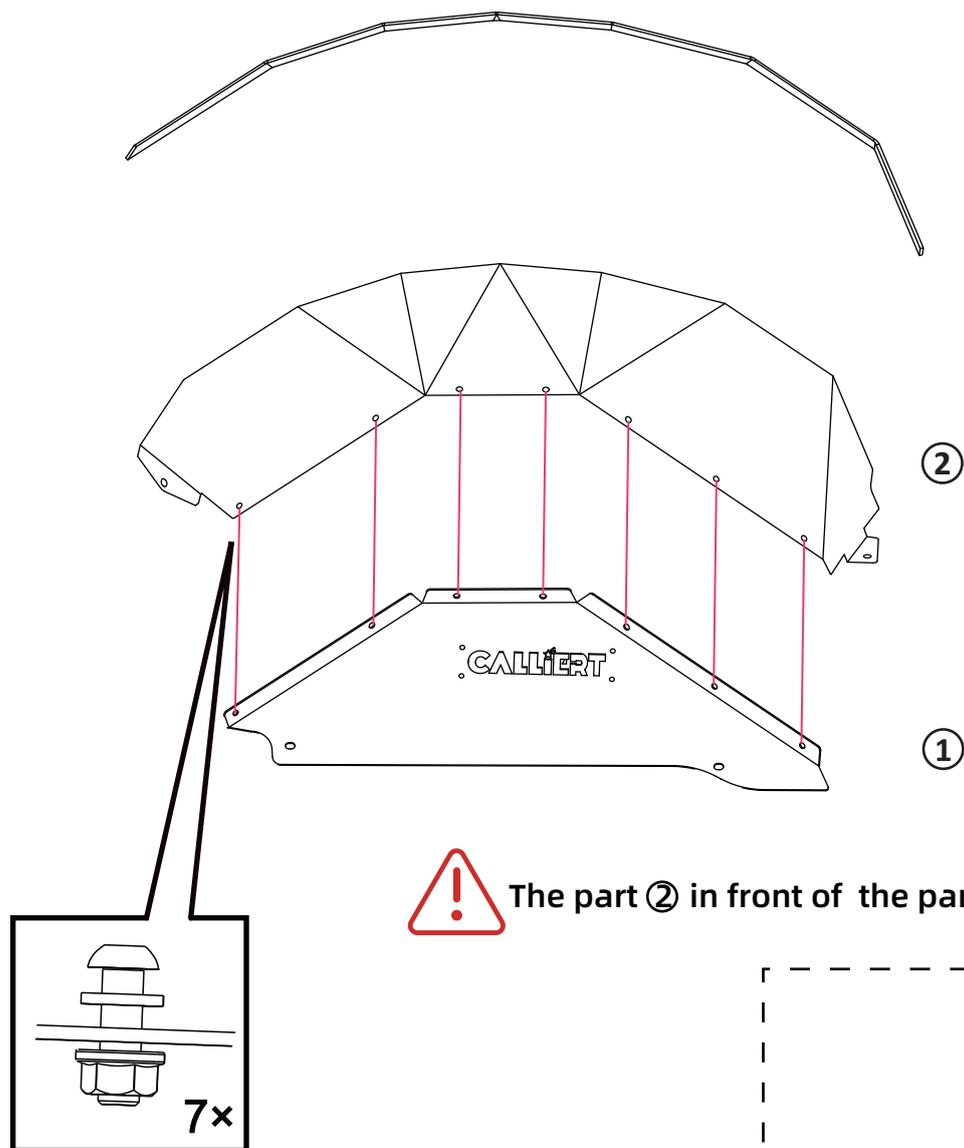

INSTALLATION MANUAL



Prepare the screws needed for assembling the inner fender liner, then assemble it as shown in the diagram.

(a*7 b*7 c*7)

INSTALLATION MANUAL



Prepare the screws needed for installing the inner fender liner.
(a*6 b*6 e*3 f*3 ③*1 ④*1)

INSTALLATION MANUAL



Drill 3 holes in the vehicle body as depicted in the diagram and insert the rivet nuts into the designated holes.

(d*1 e*3)



CALLIART

INSTALLATION MANUAL



1. Install U-nut clips at the hole positions, secure the bracket to the vehicle body with screws, and attach the sealing strip.



CALLIERT

INSTALLATION MANUAL



Insert the wheel arch liner, secure it with screws, and finalize the assembly process. Complete the installation on the opposite side using the same procedure.